

# GARDEN FURNITURE CLEANER



For everyday maintenance of tables, chairs, benches and outdoor furniture made of teak or exotic wood.

- Removes stains and grease
- Revives the colour of the wood

# **Properties**

- Cleaning compound specially formulated for teak and exotic varieties
- > Removes food stains, grease stains, mildew.
- > Brightens the wood and restores its original colour.
- > Without unpleasant odour

Colour: Clear

Drying time: 24 h before

finishing

**Equipment: stiff-bristle** 

scrubbing brush

Cleaning of tools: water

Packaging: 750ML

## **Application**

- Rough timber or oiled wood: Scrub your wood to remove large pieces of dirt. Stir before use.
- Spray the Teak Cleaning Compound on small surfaces. Let it act for 5 to 10 min.
- Scrub evenly and vigorously lengthwise and across using a stiff-bristle scrubbing brush.
- Rinse with water as the work progresses.
- Let it dry for 24h before applying the V33 Teak Oil.

### **V33 Advice**

• In case of persistent stains or extremely dirty wood, repeat the operation.

### SAFETY RECOMMENDATION AND PRECAUTION FOR USE

Contains biocidal products (preservatives): contains reaction mass of: 5-chloro-2-methyl-4-isothiazolin-3-one and 2-methyl-2H -isothiazol-3-one (3:1); 1,2-benzisothiazol-3(2H)-one. May produce an allergic reaction. P102: Keep out of reach of children. P271: Use only outdoors or in a well-ventilated area. P501: Dispose of contents/container to a waste collection center (contact the local authority).

Contains less than 5%: Non-ionic surfactants, Benzisothiazolinone, reaction mass of chloromethylisothiazolinone and methylisothiazolinone (3:1).

DO NOT ALLOW TO FREEZE.